

[illegible]

AVLT-DM08-1		75x75/100x100		
				1-9kg (2.2-19.8lbs) RATED

Technical diagram illustrating the adjustment ranges for the door hinge assembly:

- ±90°**: Indicated for the hinge's rotation around the vertical axis.
- +35° / -35°**: Indicated for the hinge's rotation around the horizontal axis.
- ±180°**: Indicated for the hinge's rotation around the vertical axis.
- max 280mm**: Indicated for the maximum height of the door.

-   When your monitor droops, please turn COUNTER-CLOCKWISE (+) to increase tension.
-   If your monitor goes up, please turn CLOCKWISE (-) to decrease tension.

*AVLT recommends that check the mounting screws every two months for tightness.

M4x12 (x4)
M-A

M4x16 (x4)
M-B

M5x12 (x4)
M-C

M5x16 (x4)
M-D

D5 (x4)
M-E

M-F (x4)

W-A (x3)

W-B (x3)

W-C (x3)

1a

Wall install

W-C W-A

1

2

3

1b

W-B W-C W-A

1

2

2

3a

Install the VESA plate to your monitor

M-A M-C M-E

3b

M-B M-D M-E M-F

Please use "M-F" gasket when there is a gap between it

4

Attach your monitor to the arms