
 
 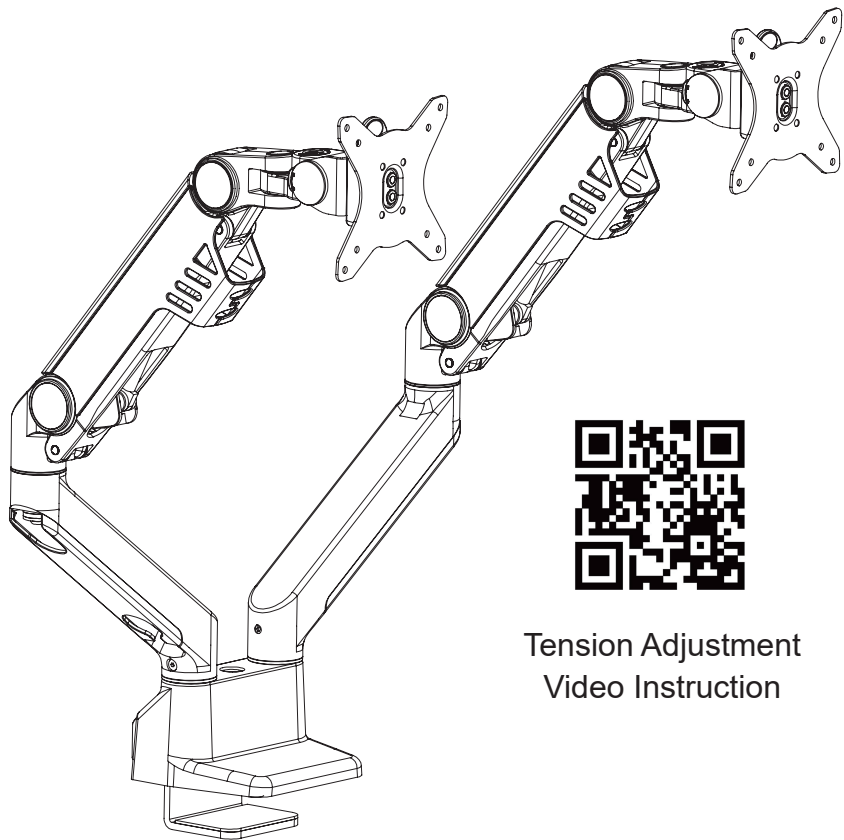
 


Heavy-Duty Premium New Top Mounting Desk Mount - Dual



Tension Adjustment
Video Instruction


AVLT-DM46-1 (Black)
AVLT-DM90-1 (White)




AP4-0140F

If you have any questions or concerns about this product.


1 Parts List

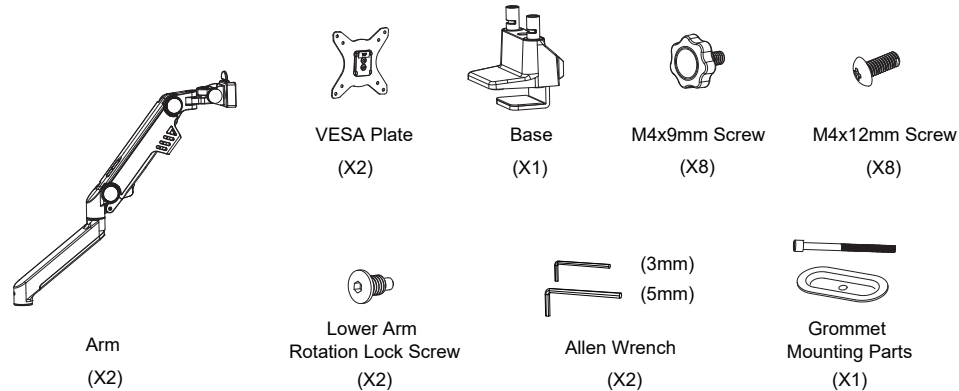

2a Clamp Installation

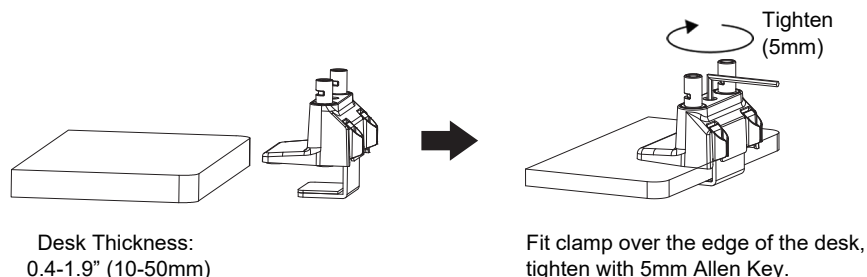


2b Grommet Installation

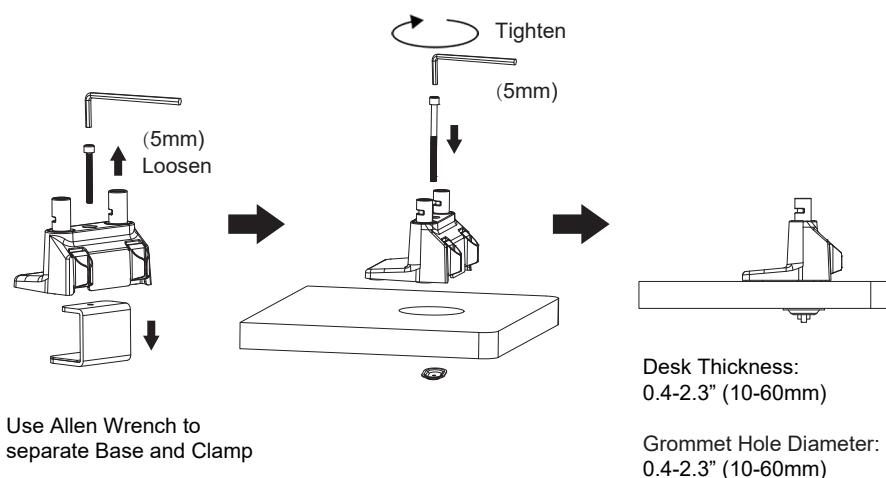


Please feel free to email us at support@avlab.com.tw


3 Arm Installation

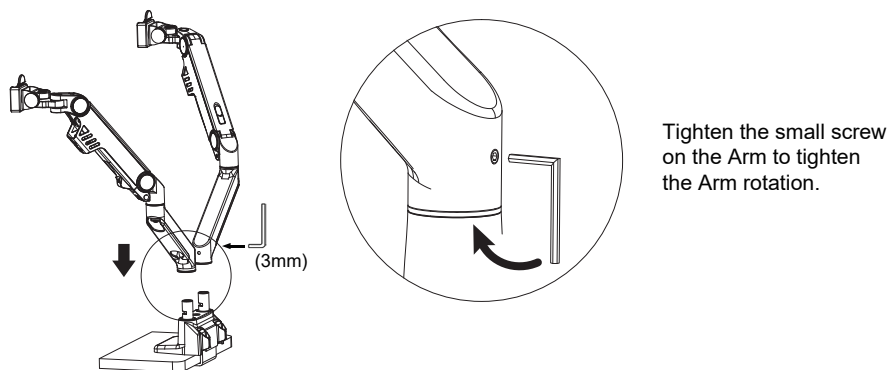

4 VESA Plate Installation

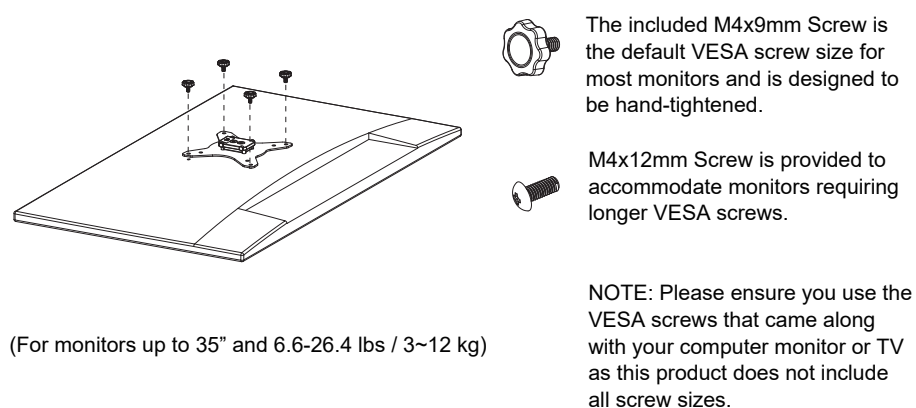


5 Monitor Installation

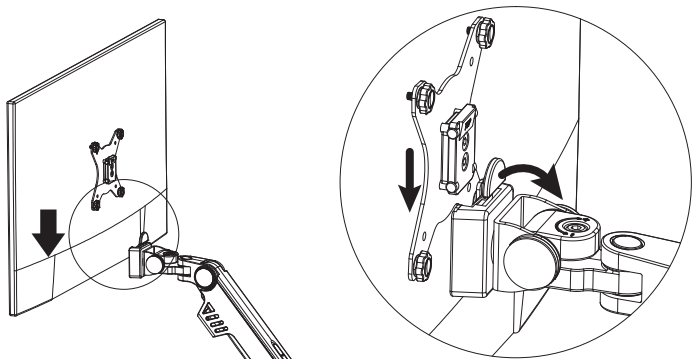


6 Adjust Arm Tension

a. To avoid any damage and facilitate easy adjustment, hold the Upper Arm in a horizontal position during tension adjustment.


By using the Allen Wrench you can adjust the gas spring tension in the Upper Arm. Adjust the screw **counter-clockwise (+)** to increase gas spring tension. Adjust the screw **clockwise (-)** to decrease gas spring tension.

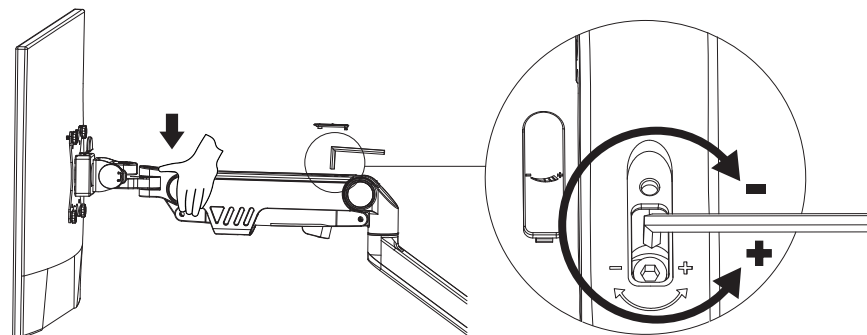

b. If the Upper Arm rises, adjust gas spring tension screw **clockwise (-)** until it stays in a horizontal position.

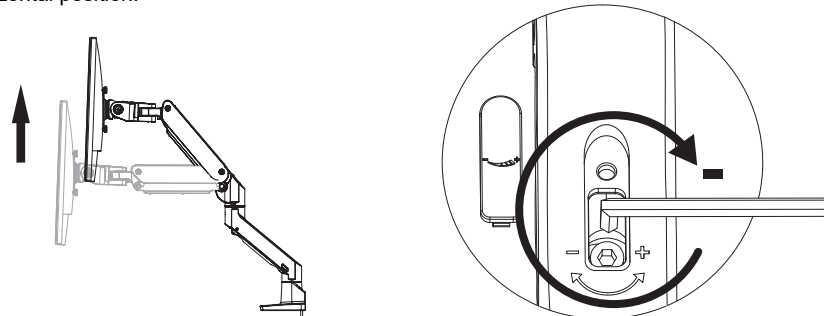

c. If the Upper Arm drops, adjust gas spring tension screw **counter-clockwise (+)** until it stays in a horizontal position.

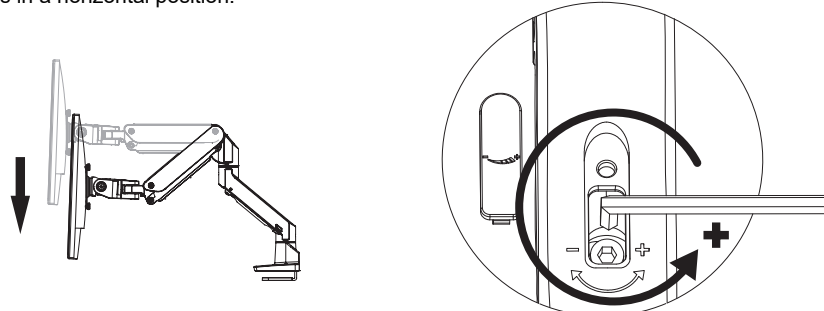

7

Monitor Tilt Adjustment

The monitor tilt screws are pre-tightened, loosen top and side tilt screw first if it's too tight for tilt adjustment, then tighten both again to lock the tilt angle.

Please tighten both the top tilt screw and side tilt screw to hold the monitor tilt in place.

8

Cable Management

The cables can be threaded through Upper Arm and Lower Arm section.
Note: An allowance of extra cable should be left to accommodate Arm movement.

9

Optional Function - Lower Arm Rotation Lock

The Lower Arm Rotation Lock feature is optional. When the Lower Arm Rotation Lock Screw is installed, it stops the Lower Arm rotating behind the desk which can help prevent swinging into the office divider or back wall.

1. Make sure the Lower Arm faces towards the front end of the desk as shown in the illustration.

NOTE: The Lower Arm Rotation Lock is pre-installed and can be removed to allow 360 degrees Lower Arm rotation.

2. Tighten the Lower Arm Rotation Lock Screw to limit 180 degrees Lower Arm rotation.

Lower Arm can rotate 180°

Remove the Lower Arm Rotation Lock Screw to allow 360 degrees Lower Arm rotation.

Lower Arm can rotate 360°

10

CAUTION

You must face the Monitor towards the Front end and position it above the Desk at all times.